

Lemon
Scent

ProSpray™

Surface Disinfectant/Cleaner

Ready-to-Use • Concentrated • Wipes




Ideal Cleaning and Disinfecting:

- Bathrooms, including toilets and showers.
- Vehicles.
- Fitness center equipment.
- Computers and keyboards.
- Telephones and fax machines.
- Spas.
- Shopping carts.
- Tabletops.
- Hand rails.
- Playground equipment.
- Amusement park rides.
- Aquatic facilities.
- Floors and walls.
- Hard, non-porous surfaces.
- Metal surfaces.
- Stainless steel surfaces.
- Glazed porcelain.
- Plastic.

Economy and Effectiveness Make ProSpray Your BEST Disinfectant Choice

- **Cleaning AND disinfection with one product** - Meets CDC requirements for safe cleaning of blood, sweat, feces, and similar soils.
- **Your safest choice for people AND equipment** - Water based non-alcohol actives. Safe for use without gloves (in absence of bio-hazards).
- **Kills the germs that cause MRSA and more** - Broad spectrum antimicrobial activity against Staphylococcus aureus, HIV, TB and many other organisms. ProSpray wipes and liquids are the same reliable formula - Safe for use separately or together .
- **Fresh lemon scent** - Deodorizes as it cleans!

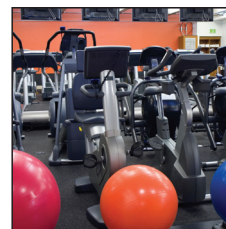

ProSpray™

Surface Disinfectant/Cleaner

Description and Intended Use:

ProSpray is a water based broad spectrum antimicrobial disinfectant and cleaner. It meets CDC guidelines for intermediate level disinfectant use when blood and body soils are likely to be present, yet is gentle enough for everyday use.

Product Specifications:

Active Agents: O-phenylphenol.
O-benzyl-p-chlorophenol.
EPA Reg. #: ProSpray wipes: 46851-10
ProSpray RTU: 46851-5
ProSpray C-60: 46851-1
Solution Color: Natural color.
Odor: Lemon scent.
Shelf Life: 2 years from date of manufacture.
ProSpray C-60 is approved for use up to 60 days after diluted.

Product Capabilities:

Kills a broad range of microorganisms including HIV-1 in 60 seconds and the following in ten minutes: Escherichia coli 0113, staphylococcus aureus, Salmonella typhosa, Pseudomonas aeruginosa, M. tuberculosis var. bovis, fungi including Trichophyton mentagrophytes, viruses including Hepatitis B and C, influenza virus type A1 (New Jersey) and influenza B (Maryland), Herpes virus types 1 and 2, and Vaccinia virus.

Cleans and Disinfects:

Because effective disinfection relies on effective removal of soil, ProSpray is ideal for both steps – no need for two separate products. Special detergents in ProSpray clean even dried on blood and other soils.

Safe for Surfaces:

ProSpray is a water based disinfectant with non-alcohol actives. Water based disinfectant formulas are safe for equipment and will not soften or haze vinyls and plastics. ProSpray will not corrode metals or stainless steel, or bleach surfaces, even with repeated use.

How to Use:

For proper surface disinfection use the 2 step method.


Step 1: Clean by wiping surfaces thoroughly with ProSpray to remove all soils.

Step 2: Disinfect by reapplying ProSpray, keeping surfaces wet for 10 minutes. Wipe off excess solution after contact time is completed.

Use Precautions:

A slight soap film may occur upon repeated application due to presence of detergents. To avoid buildup, rinse or wipe off surfaces after repeated cleanings with water and paper towel. Rinse garments or surfaces where ProSpray is used prior to application of any bleach product. Store solution away from heat and direct sunlight. Avoid freezing during shipping or storage. Avoid contact with food and food stuffs.

For specific technical and safety information, including MSDS, please visit the Certol website: <http://www.certol.com/industrialmsds.aspx>

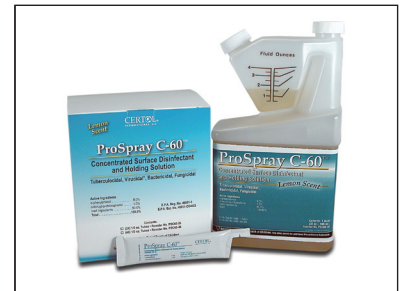

ProSpray™

Ready-to-Use Surface Disinfectant/Cleaner

ProSpray Description	Case Qty	Order #
16 oz. Empty Spray Bottle	6	PSCPS
24 oz. Spray Bottle	15	PSC240
1 Gallon Refill	4	PSC128
5 Gallon Refill	1	PSC050
Intro Kit - (2) 1 gallon refills, (4) 16 oz. empty spray bottles, 1 funnel, (4) squirt caps	1	PSCSYS

ProSpray™ wipes

Surface Disinfectant/Cleaner Towelettes

ProSpray wipes Description	Case Qty	Order #
Soft Pack - 9" x 10" (72/soft pack)	12	PSW
Canister - 6" x 6.75" (240/canister)	12	PSWC

ProSpray™ C-60

Concentrated Surface Disinfectant/Cleaner

ProSpray C-60 Description	Case Qty	Order #
16 oz. Empty Spray Bottle	6	PSC60SB
Optional Squirt Cap	6	CAPSQUIRT
32 oz. Tip & Pour Measuring Bottle - Makes 8 gallons	12	PSC60/32
1 Gallon Mixing Container	1	PSC60B
Operator Pack - (48) 1/2 oz. unit dose tubes - Makes 6 gallons	3	PSC60/48
Intro Kit - (24) 1/2 oz. unit dose tubes, (2) 16 oz. empty spray bottles, (2) squirt caps	1	PSC60/INT